

EN	Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.	DA	Kære Kunde, Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset.
DE	Sehr geehrte Kundin, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.	FI	Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yhtiöksen oikeudenomistaja, joka jatkoj puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivotamme Teille paljon iloa Gigaset-laitteestanne.
FR	Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.	SV	Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.
IT	Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.	NO	Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.
NL	Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.	EL	Αγαπητή πελάτισσα, αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.
ES	Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.	HR	Poštovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.
PT	SCaros clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.	SL	Spoštovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priložnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitkov ob uporabi naprave Gigaset.

- CS** Vážení zákazníci,
společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.
- SK** Vážený zákazník,
Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.
- RO** Stimatе client,
Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH.
Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.
- SR** Poštovani potrošaču,
Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH.
Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.
- BG** Уважаеми потребители,
Gigaset Communications GmbH е правоприемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH.
Надяваме се да ползвате с удоволствие вашия Gigaset.
- HU** Tisztelt Vásárló!
A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni.
Reméljük, megelégedéssel használja Gigaset készülékét.
- PL** Szanowny Kliencie,
Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH.
Życzymy wiele przyjemności z korzystania z produktów Gigaset.
- TR** Sayın Müşterimiz,
Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır.
Gigaset'ten memnun kalmanızı ümit ediyoruz.
- RU** Уважаемые покупатель!
Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH.
Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.

S

Profiset 30isdn



Operating instructions


- ! Please read the safety precautions outlined in these operating instructions before putting the telephone into service! (page V)



Profiset 30isdn


Profiset 30isdn

Your guide to this manual

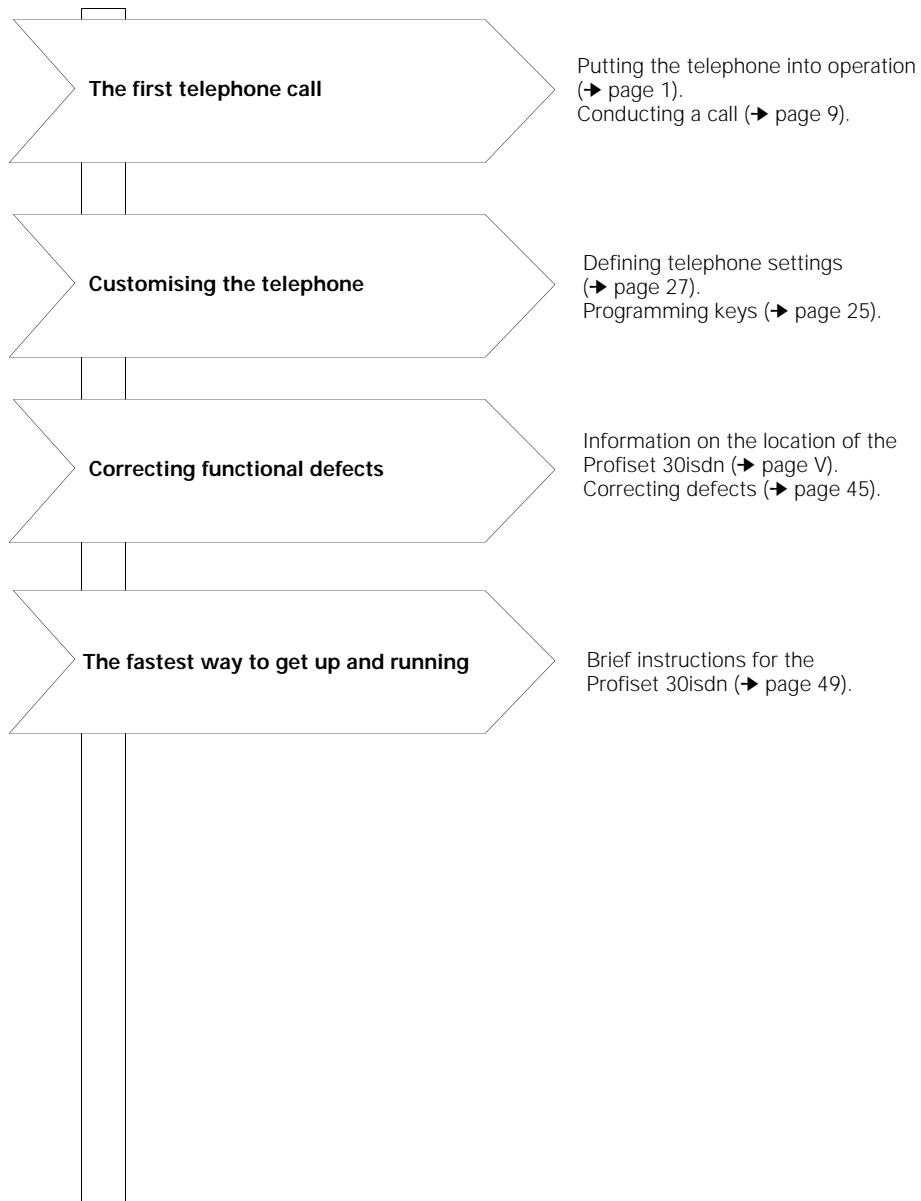

Profiset 30isdn



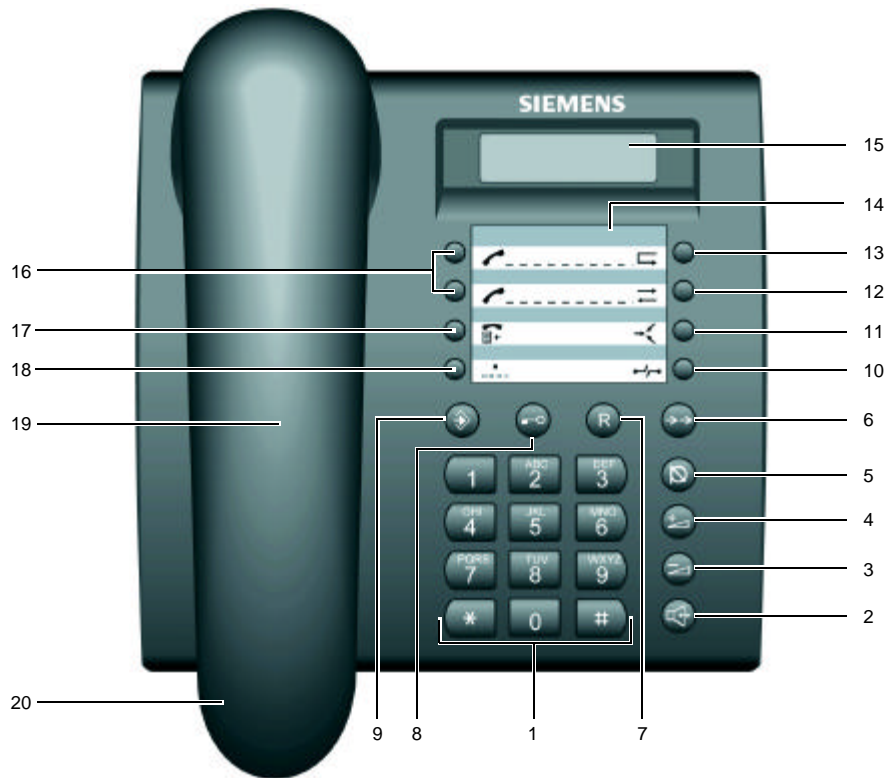












Overview: Profiset 30isdn



- | | |
|---------------------|------------------------------|
| 1 Keypad | 11 Conference key |
| 2 Loudspeaker key | 12 Callback key |
| 3 Minus key | 13 Call forwarding key |
| 4 Plus key | 14 Labelling card |
| 5 Mute key | 15 Display |
| 6 Number redial key | 16 Destination dialling keys |
| 7 Consultation key | 17 Call list key |
| 8 Locking key | 18 Speed dialling key |
| 9 Programming key | 19 Loudspeaker |
| 10 Disconnect key | 20 Handset |

Profiset 30isdn

Overview: Keys

- 
Programming key
 To start or exit a programming procedure.
- 
Locking key
 To activate/deactivate the total lock.
 To change the display for call numbers exceeding 12 digits.
- 
Consultation key
 To initiate a consultation. To toggle between two parties.
 To accept a call in waiting. To terminate a three party conference.
- 
Number redial key
 To dial the number dialled last with the handset off-hook.
 To view the number redial memory with the handset on-hook.
- 
Mute key
 To switch off the microphone.
- 
Plus key
 To increase the handset and loudspeaker volume during a call
 (the setting applies to the current call).
- 
Minus key
 To lower the handset and loudspeaker volume during a call (the setting applies
 to the current call). To delete the previous character, when entering numbers or
 letters.
- 
Loudspeaker key
 To change over to open listening. To activate on-hook preparation of dialling.
- 
Destination dialling keys
 To dial a stored call number.
- 
Call list key
 To view the call list with the handset on-hook.
- 
Speed dialling key
 To dial a speed dialling number assigned to one of the digit keys.
- 
Call forwarding key
 To activate/deactivate call forwarding.
- 
Callback key
 To initiate/cancel callback.
- 
Conference key
 To set up/terminate a three-party conference.
- 
Disconnect key
 To reject an incoming call or a call in waiting. To disconnect one party (if there
 are two calls in progress). To disconnect one party from a three-party confer-
 ence. To cancel a programming procedure without making any changes.

Profiset 30isdn

Safety precautions and approval

Safety precautions

The Profiset 30isdn complies with the European standard EN 60950, which deals with the safety of information technology equipment including electrical business equipment.

This device has been designed with safety in mind, this protecting both individuals and objects.

For your safety and protection, the telephone must not be used in bathrooms, etc. as it is not splashproof.

There is always the danger of small objects being swallowed by young children. In the case of the Profiset 30isdn, this applies in particular to the connecting cord clip.

Please make sure that such items are not accessible to children.

Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between + 5°C and + 40°C.
- Under normal circumstances, the rubber feet of the telephone will not leave marks on the installation surface. However, due to the vast array of surface finishes applied to furniture, marks on the installation surface cannot be ruled out. Place the unit on a smooth, non-slip surface.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic equipment and the plastic casing.
- Do not operate the telephone in damp environments such as bathrooms.
- The power supply connector of the NTBA must be inserted.

Profiset 30isdn

Approval and conformity

Your Profiset 30isdn has a TYPE-EXAMINATION CERTIFICATE.

It has been certified in accordance with EU Guideline 91/263/EEG Telecommunication Terminals.

This telephone meets the requirements of the EU Guideline and the national supplements to it in Germany.

It may thus be connected to and operated in any ISDN multi-device connections and ISDN PBXs.



The equipment's conformity to the above guidelines is confirmed by the CE symbol.

Your Profiset 30isdn supports the extensive range of ISDN services available. To find out which services are available to you, contact your local network operator.

Contents

Profiset 30isdn	II
Your guide to this manual	II
Overview: Profiset 30isdn	III
Overview: Keys	IV
Safety precautions and approval	V
Safety precautions	V
Location of the telephone	V
Approval and conformity	VI
Putting the telephone into operation	1
Symbols used in these operating instructions	1
Step 1: Check the contents of the package	2
Step 2: Connect the telephone	3
Step 3: Entitle the device to operate in restricted powering conditions	4
Step 4: Program the multiple subscriber numbers (MSNs)	4
Step 5: Setting the national variants	5
Step 6 (PBX operation only): Program the trunk code	5
Step 7: Try out the telephone	6
Display-driven telephone operation	7
Outgoing and incoming calls	9
Calling users	9
On-hook dialling	9
Number redial (automatic dialling)	10
Dialling call numbers using the <i>Destination dialling</i> keys (automatic dialling)	10
Dialling call numbers using the <i>Speed dialling</i> keys (automatic dialling)	11
Accepting a call	12
Rejecting a call (Disconnect)	12
Call forwarding	12
Call waiting	13
Deactivating the call signal (Do not disturb)	13
Call list	14
Callback	15
Ending a call – disconnecting	16
Convenient and secure telephone communication	17
Activating/deactivating open listening	17
Switching to mute (consultation in the room)	17
Parking a call	18
Resuming a parked call	18
Locking your telephone	19
DTMF signalling	20
Keypad signalling	20
Overview: DTMF / keypad signalling	21
Calls involving two or more parties	22
Calling the second party (consultation)	22
Switching between two calling parties (toggling)	22
Disconnecting one party	23
Three-party conference	23
Ending a conference	24
Programming keys on the telephone	25
Programming the destination dialling keys	25
Programming the speed dialling keys	25
Programming direct station selection (babyphone)	26

Contents

Quick reference for available telephone settings	27
Programming the telephone settings	28
Password	28
Ringer volume	29
Ringer melody	29
Handset and loudspeaker volume	30
Call processing type	30
Trunk code for operation at a PBX	31
Multiple Subscriber Numbers (MSN)	31
National variants	32
Signalling method to control the ISDN services	33
Connection code for parking/resuming a call	34
Date/time	34
Call number for call forwarding unconditional	34
Tariff unit factor	35
Activating/deactivating the display of charge/call time of the active call	35
Activating/deactivating the display of charge/call time of the last outgoing call	36
Activating/deactivating the summation meter for charges	37
Clearing the summation meter	37
Activating/deactivating the display of your own call number	38
Enabling/disabling call waiting	38
Clearing memory	39
Checking the settings (status)	39
Restoring the as-supplied condition	40
Displaying the software version	40
Important information for installation and operation	41
Maintenance	41
Removing and inserting the labelling cards	41
ISDN supplementary services	42
Technical data	42
Default settings	42
Overview: Signal tones	43
Third party use/disposal	43
Warranty	44
Siemens Service	44
Procedure in the case of malfunctions	45
ISDN glossary	46
Quick reference guide	49
Quick reference for available telephone settings	50
Index	51

Putting the telephone into operation

Putting the telephone into operation

Symbols used in these operating instructions




Press the appropriate key.



Enter the desired value using the *digit* keys.

In some cases display messages are provided. Example:



For information on display-driven operation of the Profiset 30isdn, see page 7.



Please read the "Safety precautions and approval" information at the front of these operating instructions before putting the telephone into operation!

Please follow the step-by-step instructions.

Putting the telephone into operation

Step 1: Check the contents of the package

The default package contains:

- 1 Profiset 30isdn,
- 1 Handset,
- 1 Handset cord (coiled),
- 1 ISDN connecting cord,
- 1 Operating instructions (not illustrated)




Profiset 30isdn



Handset




ISDN connecting cord




Handset cord (coiled)

Putting the telephone into operation

Step 2: Connect the telephone

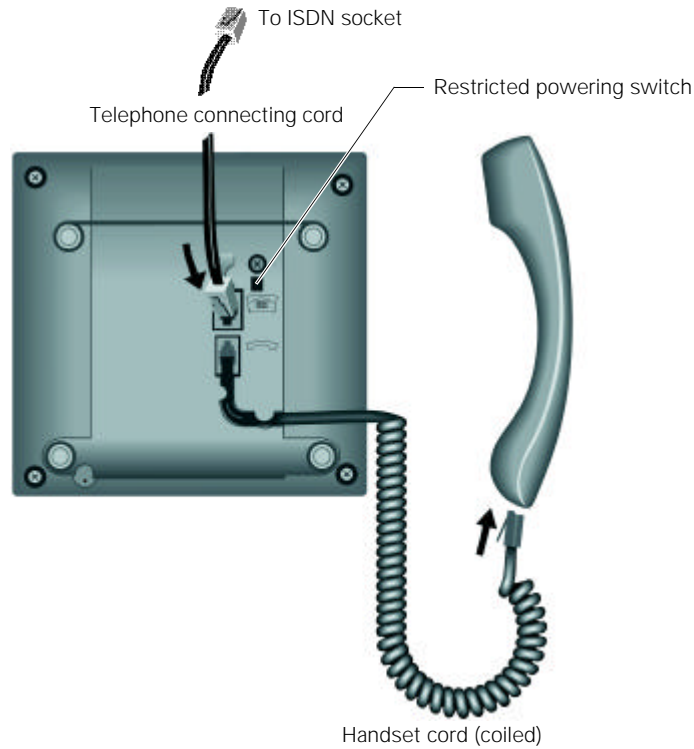


Handset cord (coiled)

Both ends of the handset cord have the same connector. Insert the connector at the long end of the handset cord into the socket labelled  on the underside of the device and insert the other connector into the handset below the mouthpiece. In both cases, the connectors must engage audibly. Feed the cable into the cable run.

Die Stecker müssen in beiden Fällen hörbar einrasten.


Telephone connecting cord

Both ends of the telephone connecting cord have the same connector.

Insert one connector into the socket labelled  on the underside of the device and insert the other connector into your ISDN socket. In both cases, the connectors must engage audibly. Feed the cable into the cable run.


Putting the telephone into operation


Note that the NTBA must be connected to the power grid. The Profiset 30isdn takes the necessary power from this NTBA.

 In order to avoid unauthorized unplugging of the telephone connecting cord from the telephone socket, the plug is protected. Use a small screwdriver or the like to unplug the connector.

Step 3: Entitle the device to operate in restricted powering conditions

The restricted powering switch is located on the underside of the device. The recessed sliding switch can be moved with a screwdriver.

If the switch points to the symbol , your telephone is entitled to operate in restricted powering conditions that means that the important telephone functions can still be used.


 If you connect more than one unit to your ISDN connection, only one unit can be operated during restricted powering. Mark this unit accordingly!


Step 4: Program the multiple subscriber numbers (MSNs)


We recommend that you enter the MSNs when first putting the telephone into operation, because only then you can use all the functions of your telephone. The MSNs (**M**ultiple **S**ubscriber **N**umbers) are the call numbers you were assigned for your ISDN connection.


These numbers are entered as follows:


Display after connecting the telephone 00.00.00 00:00

 Handset is on-hook.

 0 1 → 01 _

 Enter "1" for MSN 1 → 01 1 _

 Enter the MSN → 33758 _

 The input of the first MSN is completed. Repeat these steps for the second and third MSN.

Putting the telephone into operation



It is not necessary to enter MSNs 2 and 3. MSNs can be entered at any time (→ page 31). Please note that the first MSN is also called global call number in Austria. If more than one MSN is entered, take care that this global call number will not be used. Otherwise all units connected to this So bus will be called.

Step 5: Setting the national variants

This setting takes account of specific national features of the ISDN network:

Handset is on-hook 00.00.00 00:00

1 9 → 19 49 _

Enter the national variant, e.g. "43" for Austria → 19 43 _

Your Profiset 30isdn is preset to the national variant "49" for Germany. (For further national variants → page 32.)



The setting of the national variant is completed.

Step 6 (PBX operation only): Program the trunk code

If you are operating your Profiset 30isdn at a telecommunications system (private branch exchange), you must program a trunk code in accordance with the configuration of the system (**trunk code**, max. 2 digits → page 31) :

Handset is on-hook 00.00.00 00:00

ABC 2 GHI 4 → 24 _

Enter the trunk code e.g. "0" → 24 0 _



The programming of the trunk code is completed.



You can cancel a programming procedure without making any changes by pressing the *Disconnect* key !

Putting the telephone into operation

Step 7: Try out the telephone

You can now try out your Profiset 30isdn.

Calling another party:



Lift the handset.



Enter the call number.

The number is dialled.




Talk.

Taking a call:

Call signal is heard.

The calling party's number is indicated on the display, if it is known and call identification has not been barred.



Lift the handset and talk.



The date and time are preset with zeros by default. The correct date and time are set automatically by the switching centre the first time an outgoing call is set up. If your network operator does not support this service, you can program the date and time yourself (→ page 34).

Display-driven telephone operation

Display-driven telephone operation

Your Profiset 30isdn has a one-line display that contains several symbols.

Symbols

The following symbols indicate certain settings and modes of your Profiset 30isdn:

- Programming mode
- ⇨ Call forwarding ON
- ↔ Callback ON or initiating callback is possible
- ✂ Conference
- Locking function ON
- ♪ DTMF ON
- ⊗ Microphone OFF
- 🔊 Loudspeaker (open listening) ON


12-digit display line

Date, time, call numbers, call charge and call time are displayed in accordance with the relevant settings and modes of the telephone. Calls involving two or more parties (e.g. consultation, call waiting, three-party conference) are indicated by a digit at the first position of the display line.

Two brackets at the beginning and the end of the display line indicate a suppressed or not transmitted call number.


Display

Idle mode




00.00.00 00:00

Display after the Profiset 30isdn has been plugged into the ISDN socket.



06.07.98 13:58

Display after the first successful outgoing call has been conducted and the date/time have been transmitted from the switching centre.



---.---.--- ---:--

Display of the telephone in restricted powering condition without mains voltage (230V) from the NTBA (only with the restricted powering switch in ON position → page 4).

Display-driven telephone operation

Connected mode

0 302 34577

In the course of a call, the call number of the called party (if it is transmitted or display is not suppressed) is shown.

001.20 00:30

The display can alternate between charge (if tariff unit factor is entered)/call time of the current call (if it is activated → page 35) and the call number. The call time is displayed in minutes and seconds. If the call time exceeds 1 hour, it switches to hours and minutes.

{ - - - - - }

The call number of the called party is suppressed or not transmitted.

2 045672343

Display of the telephone with one connection put on hold and one active connection (the call number of the active call is displayed) or during call waiting (the call number of the call in waiting is displayed).

3 045672343

Display of the telephone during a three-party conference (the call number of the caller who was active before the three-party conference has been set up is displayed).

Outgoing and incoming calls

Outgoing and incoming calls

Calling users



Lift the handset.



Enter the call number.

The call number is dialled and appears on the display.




If "Display of charge/call time of the active call" is activated (→ page 35) the display alternates between call number and call charge/call time.


On-hook dialling

You can enter (or change) the call number and then set up the connection when the handset is on-hook.



Enter the call number (automatic dialling is possible).

Backspace to delete with .



and 

Lift the handset and talk.

or



Set up the connection via the *Loudspeaker* key;



Lift the handset in order to be able to talk.

There is also another way of on-hook dialling.
(Caution: Editing the entered number is not possible!)




Press the *Loudspeaker* key.



Enter the call number (automatic dialling is possible).

The call number is dialled.



and 

Lift the handset and talk



With the *Loudspeaker* key you can activate/deactivate open listening.

Outgoing and incoming calls

Number redial (automatic dialling)

The last five numbers dialled are stored automatically. If a user you wish to contact is busy or unreachable, you can initiate number redial the next time you attempt to call, without having to dial the call number again.

Number redial is also possible with the handset on-hook. The number can be edited if necessary (→ page 9).

The numbers are sorted in ascending order according to the date and time. The last number dialled is thus at the top of the list.



Lift the handset.



Press the *Number redial* key and the call number dialled last is dialled.

or



Press the *Number redial* key until the desired call number appears on the display,



Lift the handset. The call number is dialled.



The memory for the number redial can be cleared with the setting "Clear memory" (→ page 39). The memory is also cleared when the ISDN connecting cord has been unplugged.

Dialling call numbers using the *Destination dialling* keys (automatic dialling)

Frequently used call numbers can be dialled quickly and easily using destination dialling keys. This means that you do not have re-enter the number each time.

Destination dialling is also possible with the handset on-hook. The number can be edited if necessary (→ page 9). You can also store parts of numbers and the remaining digits can then be suffix-dialled as required.

Prerequisite: You must have programmed a *Destination dialling* key (→ page 25).








Lift the handset.



Press the *Destination dialling* key. The stored call number appears on the display and is dialled.

Outgoing and incoming calls




or

-  Handset is on-hook.
-  Press the *Destination dialling* key. The stored call number is displayed.
-  or  Edit or complete the call number if necessary.
-  Lift the handset. The call number is dialled.







Dialling call numbers using the *Speed dialling* keys (automatic dialling)

10 frequently used call numbers can be dialled quickly and easily using *Speed dialling* keys. Speed dialling is also possible with the handset on-hook. The call number can be edited if necessary (→ page 9). You can also store parts of numbers and the remaining digits can then be suffix-dialled as required.

Prerequisite: You must have programmed a *Speed dialling* key (→ page 25).

-  Lift the handset.
-  and  Press first the *Speed dialling* key and then the relevant *digit* key. The stored call number appears on the display and is dialled.

or

-  Handset is on-hook.
-  and  Press first the *Speed dialling* key and then the relevant *digit* key. The stored call number is displayed.
-  or  Edit or complete the call number if necessary.
-  Lift the handset. The call number is dialled.



In order to select a specific network operator, program the relevant circuit identification code on a destination or speed dialling key. The remaining number can be suffix dialled from another destination or speed dialling key, the call list key, the number redial key or via the *digit* keys.

Outgoing and incoming calls

Accepting a call


The Profiset 30isdn rings with a particular call signal. The calling party's number appears on the display if it is known.

You conduct the call via the handset and additionally you can activate the open listening function (→ page 17).

Alternatively, you can reject the call.

Call signal is heard.

Calling party's number is displayed, if it is known.



Lift the handset and talk.

Rejecting a call (Disconnect)

You can reject a call.

The call signal is heard but you do not want to take the call.



You can reject the call via the *Disconnect* key. The caller receives the busy tone and hears a corresponding message from the switching system, if possible.

Call forwarding

You can forward incoming calls for the first MSN to another call number in order to be reachable even if you are not close to your telephone. The incoming call is immediately forwarded to the programmed call number. This means that your telephone will not ring in this case.

You must apply to your local network operator for this feature. Inquire about the respective charges.



Handset is on-hook.



Press the *Call forwarding* key.

The call forwarding symbol ⇨ on the display indicates that call forwarding is activated.

Call forwarding is deactivated if you press the *Call forwarding* key again.



Prerequisite for call forwarding is a call number for call forwarding (→ page 34) and the first MSN (→ page 31) have been programmed.

Outgoing and incoming calls

Call waiting

You must apply to your local network operator for the "Call waiting" feature.

While you are conducting a call, a second incoming call is signalled acoustically and visually. You can then accept or reject this call without disconnecting the first caller.

Accepting call waiting



A call is in progress.

The call waiting signal is heard. The call number of the second party is displayed, if it is transmitted.



You can accept the call via the *Consultation* key. You are now connected to the second caller. The first call is automatically put on hold. You can toggle between both calls via the *Consultation* key (Switching between two calling parties/toggling → page 22).



Call waiting is not possible during a conference or consultation.

The "Call waiting" function must be activated (→ page 38).

Rejecting call waiting



A call is in progress.

The call waiting signal is heard.



Reject the call via the *Disconnect* key. The second caller receives the busy tone.

Deactivating the call signal (Do not disturb)

You can deactivate the call signal of your Profiset 30isdn but nonetheless continue to make calls. The call will only be shown on the display.



Start the programming procedure.



or



Enter or select the value "0"



Save the setting.

Outgoing and incoming calls

Call list

If a caller does not reach you or if a caller or a queued caller is rejected, the relevant call number (if it is known) is stored in the call list.

Up to 12 different call numbers can be stored. The number of retries of the same call number are also counted and displayed. The most recent entry is displayed first.

Retrieving entries from the call list



The most recent entry of the call list is displayed by pressing the *Call list* key. Press the *Call list* key again to view the previous entries.




If you press the *Disconnect* key the display of the call list will disappear.

Dialling a number from the call list

Call numbers which are stored in the call list can be dialled as follows:



Press the *Call list* key until the desired call number appears on the display.



Lift the handset and talk.

If the connection to the party in the call list has been set up and answered, the entry is deleted from the call list.

Storing a number from the call list

Numbers from the call list can be programmed on a *Destination dialling* key or *Speed dialling* key.



Select the number via the *Call list* key.



Start the programming procedure.



Press the *Destination dialling* key.



Save the setting.

or



Start the programming procedure.




Press the relevant *digit* key.



Save the setting.



You can cancel a programming procedure without making any changes by pressing the *Disconnect* key !

Outgoing and incoming calls

Deleting the call list

Deleting the call list is possible via the "Clearing memory" function (→ page 39).



Start the programming procedure.



Enter the code "2".



Confirm the deletion of the call list.



The call list memory is also cleared when the ISDN connecting cord has been unplugged. Deletion of single calls from the call list is not possible.

Callback

You must apply to your local network operator for this feature. Inquire about the respective charges.

If you have activated callback because the party you called was busy, you are automatically called back as soon as the other party finishes his/her call.

If you are engaged in a call when callback takes place, you are called again on completion of your call.

Initiating a callback

Prerequisite: You called a party whose line was busy at the time.

If the callback symbol  appears on the display, you can initiate a callback.



Initiate callback with the *Callback* key.



Replace the handset.



You can activate one callback only. Activating further callbacks is possible if an existing callback has been accepted or deleted.

Outgoing and incoming calls

Accepting a callback

You have activated a callback with a busy party.

The call signal for callback is heard.




Lift the handset.
The requested party is called now.

Clearing a callback

You have activated a callback.



You can cancel this callback by pressing the *Callback* key.
The callback symbol  disappears on the display.

Ending a call – disconnecting

When you actively close the connection, the telephone returns to the idle mode and displays date and time. A queued caller is now signalled like a normal incoming call.



End the call by replacing the handset.

Convenient and secure telephone communication

Convenient and secure telephone communication


Activating/deactivating open listening

If those present in your room wish to listen to your conversation, you can switch on the loudspeaker.




A call is in progress.





To switch on the loudspeaker press the *Loudspeaker* key. The symbol  appears on the display.



To switch off the loudspeaker press the *Loudspeaker* key. The symbol  disappears on the display.



You can adjust the volume of the loudspeaker and the handset with the *Plus*  and *Minus*  keys.


Switching to mute (consultation in the room)

If there are times when you do not want your calling party to hear your conversation, e.g. if there is a consultation in the room, you can switch your telephone to "mute".




A call is in progress.



To activate the mute function press the *Mute* key. The symbol  appears on the display. The mute function is activated.



To deactivate the mute function press the *Mute* key again. The symbol  disappears on the display. The mute function is deactivated.

Convenient and secure telephone communication

Parking a call

You can temporarily park a call in order to

- reactivate it at a later stage
- resume it at another telephone
- unplug your telephone from one socket and plug it into another

The telephone must not be parked for more than three minutes, as otherwise the call will be disconnected.




A call is in progress.

Press the *Programming* key and enter the code "04" for "Parking a call".

The stored connection code is indicated on the display.

The connection code is a number under which the call can be parked and later resumed.

If the call is to be parked under a different connection code, the connection code must have been changed beforehand (→ page 34).



Press the *Programming* key again and replace the handset.

The call is now parked for a maximum period of 3 minutes.



A call can only be parked, if is connected to the same S₀ bus.

Resuming a parked call

You can resume a parked call from the same telephone or from a different telephone (it must be connected to the same S₀ bus).


Prerequisite: A call is parked and you are not conducting a call.



Handset is on-hook.


Press the *Programming* key and enter the code "04" for "Parking/resuming a call".

The connection code is indicated on the display. If the call was parked under a different connection code, change the connection code beforehand (→ page 34).



Press the *Programming* key again and lift the handset. You are now re-connected to the parked caller.



You can cancel a programming procedure without making any changes by pressing the *Disconnect* key  !

Convenient and secure telephone communication

Locking your telephone

You can lock your Profiset 30isdn against possible unauthorized use:

- **Total lock**, only allows you to dial a preset direct station selection number (Programming direct station selection: → page 26).

Incoming calls are permitted.

- **Partial lock**, only allows you to dial with the *Destination dialling* keys (Programming the destination dialling keys: → page 25; Dialling call numbers using *Destination dialling* keys: → page 10) and the *Speed dialling* keys (Programming the Speed dialling keys: → page 25; Dialling call numbers using the *Speed dialling* key: → page 11).


Incoming calls are permitted.



Handset is on-hook.



Press the *Locking* key.


The symbol  appears on the display.



Enter the password.




Enter the code "1" for **total lock**, "2" for **partial lock** or "0" for deactivating the lock.



Press the *Locking* key or *Programming* key.

The telephone is locked or the lock is deactivated.

An activated lock (total or partial lock) is indicated via the symbol  on the display.



The telephone can only be locked if the password is not set to 0000 (Defining the password: → page 28).

If the password is set to 0000 and the telephone was previously locked the lock is deactivated then.

Convenient and secure telephone communication

DTMF signalling

When a connection is set up, you can use the keypad to transmit DTMF signals (tones in **d**ual-**t**one **m**ultifrequency), e.g. to control an answering machine remotely.



A call is in progress.



Enter the control digits.

The digits entered appear on the display for several seconds and the transmitted signals can be heard via handset or loudspeaker.


Keypad signalling

Instead of DTMF signalling, you can transmit keypad information elements (IE) e.g. to activate features on PBXs or certain ISDN services in several countries (→ page 33: Signalling methods to control the ISDN services).

Since DTMF signalling is set by default for your telephone, it must first be deactivated.



A call is in progress.



Press the *Programming* key, the *Asterisk* key and again the *Programming* key.

Keypad signalling is activated for the current call. The keypad digits entered appear on the display preceded by the symbol " _ ":

Press the *Programming* key, the *Asterisk* key and the *Programming* key again to return to DTMF signalling.






Replace the handset to reactivate DTMF signalling.

Convenient and secure telephone communication

Overview: DTMF / keypad signalling

The following table illustrates which signalling method is possible in which mode of your telephone:

Modes of the telephone	Signalling method	Keypad signalling activated   
Idle mode	Normal dialling	Keypad
Dialling mode	Normal dialling	Keypad
Suffix dialling mode (party is called)	DTMF	Keypad
Incoming call		Keypad
Connected mode	DTMF	Keypad
Dialling mode (2. call)	Normal dialling	Keypad
Suffix dialling mode (2. call)	DTMF	Keypad
Call waiting mode	DTMF	Keypad
Called party hooked on	DTMF	Keypad

Calls involving two or more parties

Calls involving two or more parties

Calling the second party (consultation)

You can consult with another party in the course of a call. The first call is put on hold during the consultation call.



A call is in progress.



Press the *Consultation* key.



Enter the call number of the party to be consulted.

If you hear the ringing tone:

Wenn der Rückfragepartner den Hörer abnimmt:



When the other party answers, conduct your consultation call.

If the other party does not answer:



Press the *Consultation* key.

You are reconnected to the first party.

If you hear the busy tone:

You are automatically reconnected to the first party.

Ending a consultation

When you end a consultation, you return to the caller on hold.

Switching between two calling parties (toggling)

In the course of a consultation call you can alternate (toggle) between the other two parties. The party who is waiting cannot listen in.



A consultation call is in progress.



Press the *Consultation* key.
The second party is put on hold. The call is switched to the first party.

If you want to return to the second party:



Press the *Consultation* key.
The first party is put on hold. The call is switched to the second party.

Calls involving two or more parties



The call numbers of the other parties are only displayed if they are known.

Call numbers are not displayed, for example, in the case of incoming calls with number suppression or calls from analog stations.

Disconnecting one party


You can disconnect one party in the course of a consultation call. Afterwards, you are automatically connected to the remaining party.



A consultation call is in progress.



Press the *Disconnect* key.



Enter the code "0" or "1" .

Enter "0" if you want to disconnect the party, who is put on hold (his/her call number is **not** displayed).

Enter "1" if you want to disconnect the party, who you are talking to (his/her call number is displayed).

Three-party conference

In a conference, all parties can listen in and talk to each other.

You must apply to your local network operator for this feature. Inquire about the respective charges.

In the course of a consultation call you can connect yourself to the other two parties and set up a three-party conference.



A consultation call is in progress.



Press the *Conference* key.


You are now connected to the other two parties. The symbol →* appears on the display.

Calls involving two or more parties

Ending a conference

You can disconnect one party or toggle between the two parties. To terminate the conference completely, replace the handset.

Ending a conference by disconnecting a party



A conference is in progress.

Press the *Disconnect* key and then "0" or "1"

Enter "0" if you want to disconnect the party whose call number is not shown on the display.


Enter "1" if you want to disconnect the party whose call number is shown on the display.

Ending a conference and toggling between parties



A conference is in progress.

Press the *Conference* key.

The conference is ended. The symbol  disappears on the display.

You are back in the consultation call before the conference has been set up. You are connected to the first party and the second party is put on hold.

You can now toggle between the two parties via the *Consultation* key (→ page 22).



During a conference, the call number of the party added-on last is shown on the display, if is known.

Call numbers are not displayed, for example, in the case of incoming calls with number suppression or calls from analog stations.

Exiting from a conference



A conference is in progress.

Replace the handset.

Both parties are disconnected.
The conference is terminated.

Programming keys on the telephone








Programming keys on the telephone

Programming the destination dialling keys





Each *Destination dialling* key (at the top, left to the labelling card → page III) can be programmed with a frequently used call number (up to 24 digits)

If a *Destination dialling* key has already been assigned, the call number is displayed by pressing this key.

You can cancel a programming procedure without making any changes by pressing the *Disconnect* key.

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.
-  Press the *Destination dialling* key.
-  Enter the call number.

If you press the *Number redial* key, you can also program the second *Destination dialling* key without having to exit the programming procedure.

-  Press the *Number redial* key in order to be able to program the second *Destination dialling* key with a call number.
-  Press the second *Destination dialling* key.
-  Enter the call number.
-  Destination dialling numbers are stored.












You can use the labelling cards supplied to note the names of the users next to the associated keys, for example (→ page 41).

Programming the speed dialling keys

You can also program the *digit* keys 0 to 9 with frequently used call numbers (up to 24 digits).






If a *digit* key has already been assigned with a speed dialling number, the call number is displayed by pressing first the speed dialling key and then the *digit* key.

Programming keys on the telephone

-  Handset is on-hook.
 -  Start the programming procedure.
 -  Enter the password if necessary.
 -  Press one of the *digit* keys.
 -  Enter the call number.
- If you press the *Number redial* key, you can also program another *Speed dialling* key without having to exit the programming procedure.
-  Press the *Number redial* key in order to be able to program another *Speed dialling* key with a call number.
 -  Press another *digit* key.
 -  Enter the call number.
 -  Speed dialling numbers are stored.

Programming direct station selection (babyphone)

You can program "direct station selection" in your Profiset 30isdn. The direct station selection number is automatically dialled by pressing any key on the keypad (if the telephone is locked with direct station selection and the handset is lifted). Your child can use direct station selection (baby phone) for example, to contact you if when you are with friends.

-  Handset is on-hook.
-  Start the programming procedure.
-  Enter the password if necessary.
-  Enter the direct station selection number.
-  The direct station selection number is stored.



The direct station selection number is only dialled if the telephone is locked (→ page 19) and a direct station selection number has been programmed.

Quick reference for available telephone settings

Quick reference for available telephone settings

Description	Procedure	Telephone settings	page
Call number for call forwarding uncondit.	⊙ 0 2	one call number	34
Call processing type	⊙ 0 6	main station (0) / point to point (1)	30
Call waiting	⊙ 0 7	disable (0) / enable (1)	38
Checking the settings (status)	⊙ 0 0		39
Clearing mememory	⊙ 2 5	destination dialling memory (0); speed dialling memory (1); incoming call memory (2); last number redial memory (3)	39
Clearing the summation meter	⊙ 1 8		37
Connection code for parking/ resuming a call	⊙ 0 5	none or max. two-digit connection code (1 ... 99)	34
Date/time	⊙ 1 3		34
Display of charge/call time of active call	⊙ 1 6	OFF (0) / ON (1)	35
Display of charge/call time of last outgoing call	⊙ 1 7	OFF (0) / ON (1)	36
Displaying of the summation meter for charges	⊙ 1 4		37
Displaying the software version	⊙ 2 7		40
Handset and loudspeaker volume	⊙ 2 3	four levels (1 ... 4)	30
Keypad signalling	⊙ * ⊙		20
MSN	⊙ 0 1	MSN 1; MSN 2; MSN 3	31
National variants	⊙ 1 9		32
Own call number	⊙ 0 3	OFF (0) / ON (1)	38
Password	⊙ 2 0	four-digit password (0000 ... 9999)	28
Programming the destination dialling keys	⊙ 1 0	2 call numbers	25
Programming the speed dialling keys	⊙ 1 1	10 speed dialling numbers	25
Programming direct station selection	⊙ 1 2	one direct station selection number	26
Restoring the as-supplied condition	⊙ 2 6		40
Ringer melody	⊙ 2 2	four melodies (adjustable for each MSN)	29
Ringer volume	⊙ 2 1	four levels (1 ... 4); OFF (0)	29
Signalling method to control the ISDN services	⊙ 0 8	CFU (1); AOC (2); CH (3); 3PTY (4)	33
Tariff unit factor	⊙ 1 5	0,00 ... 9,99	35
Trunk code	⊙ 2 4	max. two-digit trunk code (0 ... 99)	31

Programming the telephone settings

Programming the telephone settings

Nearly all settings of your telephone (except parking a call, input of the connection code and checking the settings of the telephone) can only be programmed with the handset on-hook (idle mode).

Programming procedures are started and exited with the *Programming* key. A successful programming procedure is concluded with a positive confirmation tone (→ page 43). An unsuccessful programming procedure is concluded with a negative confirmation tone (→ page 43).

A programming procedure can be cancelled at any time without making any changes via the *Disconnect* key.

A programming procedure is automatically cancelled if no key has been pressed for longer than 1 minute.

When entering digits (e.g. the input of the MSN) the digit entered last can be deleted via the *Minus* key.

Password









You can define a password to protect against unauthorized settings on your telephone. The password is a 4-digit secret number. The following telephone functions can be set without entering the password:

- Handset volume
- Ringer volume
- Ringer melody
- Park and resume a call
- Display of own call number
- Call waiting

All the other settings can only be activated after the password has been entered correctly.

All password-protected settings (except restoring the as-supplied condition) are freely accessible in the as-supplied condition (PIN 0000). Therefore, you should program your individual password.

When you are entering the password, the digits you enter are represented on the display as symbols only, for security reasons.

-  Handset is on-hook.
-     Start the programming procedure.
-  Enter the previous password.
-  Enter the new password twice (one after the other).
-  The new password is saved.


Programming the telephone settings



If you enter an incorrect password, the programming procedure will be immediately cancelled. If you have forgotten your password, please contact your dealer.

Ringer volume

You can set the volume of the call signal to four levels (1...4: 1=very low, 4=very loud). The volume is preset to level 2. If the volume is set to level 0, the call signal is deactivated (do not disturb). You can set the volume via the *digit* keys or the +/- keys.

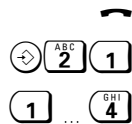

Handset is on-hook.

Start the programming procedure.

Press one of the keys 1 ... 4.

or



Change the volume step by step via the +/- key.

or



Deactivate the call signal by pressing "0"

Save the setting.

Ringer melody


A specific ringer melody can be set for each of the three MSN. There are four different melodies.

The presettings are:

for MSN 1 melody 1,

for MSN 2 melody 2,

for MSN 3 melody 3.

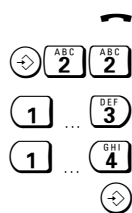

Handset is on-hook.

Start the programming procedure.

Select MSN 1, 2 or 3.

Press one of the keys 1 ... 4 to select a ringer melody.







Save the setting.

Set the ringer melody for each MSN in accordance with the above procedure.




Programming the telephone settings

Handset and loudspeaker volume

You can set the volume of the handset and loudspeaker to four levels (1...4: 1=minimum volume, 4=maximum volume). The volume is preset to level 2. You can set the volume via the *digit* keys or the +/- keys.

-  Handset is on-hook.
-    Start the programming procedure.
-  ...  Press one of the keys 1 ... 4.

or

-  /  Change the volume step by step via the +/- key.
-  Save the setting.









In the course of a call, you can change the volume via the +/- key. The setting applies only to the current call.

Call processing type

The following settings are possible:

- **0 = Main station:** If you were assigned MSNs by your network operator, this is the correct call processing type. Several devices with the same or different MSN can be connected to a main station, whereby calls between these devices are liable for charges. "Main station" is also the correct call processing type for operating at the majority of extensions (PBX).
- **1 = Point to point:** Point to point connection = system operation. In the event of a telephone system failure, the telephone can be operated at a system connection. In this emergency operation scenario, the simple telephone functions can be activated. The telephone rings with every incoming call at the system connection irrespective of possibly entered MSN.








The telephone is preset to "Main station"

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.
-  or  Press key 0 or 1 .
-  Save the setting.

Programming the telephone settings

Trunk code for operation at a PBX

A trunk code must be defined if the Profiset 30isdn is operated at a private branch exchange (PBX). In this case, enter the digit(s) (maximum: two digits) used by the telephone to access the public telephone network (see the operating instructions of your PBX).

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.
-  Enter the trunk code.
-  Save the setting.






If you want to program destination dialling, speed dialling and direct station selection numbers (→ page 26) you have to enter the relevant trunk code before the call number (only in conjunction with a PBX).

If it is not possible to dial a number from the call list even though you have entered the correct trunk code, delete the trunk code and try again.

Multiple Subscriber Numbers (MSN)

You can enter up to three MSNs for your Profiset 30isdn. Do not enter any country or area codes ! Entry of the second and third MSNs is optional.

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.
-  ...  Select MSN 1, 2 or 3.
-  Enter the MSN.
-  Save the setting.

Enter each MSN according to the above procedure.

Programming the telephone settings



You cannot change the first MSN if call forwarding is activated for it (→ page 12).

If you do not enter any MSNs, all call numbers assigned to the NT are accepted.

The first MSN must be entered in conjunction with several PBXs.

If you enter an incorrect MSN, you can only conduct outgoing calls. Callers will hear the busy tone and, with ISDN, an information text will appear on the display.

National variants

This setting is used to define country-specific features such as the signalling method to control the ISDN services. To set the national variant, a two-digit or three-digit country code must be entered.

You can choose among the following national variants:

- | | |
|------------------|--------------------|
| ● 31 Netherlands | ● 43 Austria |
| ● 32 Belgium | ● 44 Great Britain |
| ● 33 France | ● 45 Denmark |
| ● 358 Finland | ● 46 Sweden |
| ● 39 Italy | ● 47 Norway |
| ● 41 Switzerland | ● 49 Germany |



Handset is on-hook.



1

WXYZ
9

Start the programming procedure.



Enter the password if necessary.



Enter the national variant.



Save the setting.



You can cancel a programming procedure without making any changes by pressing the *Disconnect* key !

Programming the telephone settings

Signalling method to control the ISDN services







In most of the countries local network operators use the so-called "functional protocol" to control the following ISDN services:

- 1 Call Forwarding Unconditional (CFU)
- 2 Advice of Charge (AOC)
- 3 Hold, Consultation/Toggling (HOLD)
- 4 Three-party conference (3PTY)

The default settings of your Profiset 30isdn is preset to the functional protocol. If the above-mentioned ISDN services work correctly (→ page 12, 22, 23, 34), you should keep on controlling these services via functional protocol.

In some countries, however, keypad signalling is used to control the above ISDN services instead of the functional protocol. You will recognize that when it is possible to control the ISDN services by entering keypad sequences (e.g. *21#, *#21# a.s.o.).

To find out which ISDN services are controlled by keypad signalling in your country, contact your local network operator.

-  Handset is on-hook.
-  Start the programming procedure.
-  Enter the password if necessary.
-  Enter the code (1 ... 4) for the ISDN service.
-  Enter the code (0 or 1) for the signalling method.
-  Save the settings.











Note:
if you change the national variant (→ page 32),
the signalling method for all ISDN services is set
to functional protocol.

Programming the telephone settings








Connection code for parking/resuming a call

The connection code is a number under which a call can be parked and later resumed (→ page 18: "Parking a call"). The permitted values are 1 to 99 or "none" (no input).

-  or  Handset is on-hook, or a call is in progress.
-    Start the programming procedure.
-  Enter the password if necessary.
-  Enter the connection code.
-  Save the setting.

Date/time






The date and time are preset with zeros by default. The correct date and time are set automatically by the switching centre the first time an outgoing call is set up. If your network operator does not support this service, you can program the date and time yourself. Your input is checked for plausibility.

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.
-  Enter first the date and then the time (e.g. "0709981022" for September 7, 1998 7-09-98 10.22 a.m.). Please note that you have to differentiate between a.m. and p.m. in the following way:
"... 1030" stands for 10.30 a.m.
"... 2230" stands for 10.30 p.m.
-  Save the setting.

Call number for call forwarding unconditional

You can forward calls to another telephone in order to be always reachable under your call number (→ page 12: "Call forwarding").

The call number of the other telephone (including area code) must have been programmed before activating call forwarding.

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.

Programming the telephone settings



Enter the call number for call forwarding.



Save the setting.



The call charges incurred in connection with call forwarding (e.g. car telephone/mobil telephone) are not displayed on the Profiset 30isdn nor registered on the summation meter.

The caller only pays for the connection between his or her phone and the initial destination; the remainder of the connection must be paid for by the party who has activated call forwarding.

Tariff unit factor

Before you switch on the charge meter, you should enter the tariff unit factor, i.e. the costs calculated by your network operator for each call charge unit.



Handset is on-hook.



Start the programming procedure.



Enter the password if necessary.



Enter the tariff unit factor.



Save the setting.



Note:
Enter the number of three decimal places for the tariff unit factor.

Activating/deactivating the display of charge/call time of the active call

If the display of charge/call time for the active (current) call is activated, the display alternates between the call number and the call charge (if incurred)/call time.

Enter 0 or 1 to deactivate or activate the display of charge:

- "0" Display of charge /call time of the active call is deactivated
- "1" Display of charge /call time of the active call is activated

In the as-supplied condition, the display of charge/call time of the active call is activated.







Handset is on-hook.



Start the programming procedure.

Programming the telephone settings

-  Enter the password if necessary.
-  or  Press key 0 or 1.
-  Save the setting.









Activating/deactivating the display of charge/call time of the last outgoing call

The charge and call time for the last outgoing call (if it is activated) are displayed for approx. 10 seconds after the handset has been lifted and replaced.

Enter 0 or 1 to deactivate or activate the display of charge:

- "0" Display of charge /call time of the last outgoing call is deactivated
- "1" Display of charge /call time of the last outgoing call is activated

In the as-supplied condition, the display of charge/call time of th last outgoing call is activated.

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.
-  or  Press key 0 or 1.
-  Save the setting.








There may be differences between the device's meter and the charge meter of the switching centre. The charge meter of the network operator is definitive for the telephone bill.

Programming the telephone settings






Activating/deactivating the summation meter for charges

The sum of all charges accrued, since the most recent clearing of the summation meter, can be displayed.

-  Handset is on-hook.
-  Start the programming procedure.
-  Enter the password if necessary.
-  The summation meter is shown on the display.
-  Summation meter is switched off.

Clearing the summation meter

The summation meter for charges can be cleared at any time. In this case, the summation meter then restarts at 0.

-  Handset is on-hook.
-  Start the programming procedure.
-  Enter the password if necessary.
-  The summation meter is shown on the display.
-  Summation meter is cleared.

Programming the telephone settings

Activating/deactivating the display of your own call number








You must apply to your local network operator for this feature. Inquire about the respective charges.

You can temporarily suppress the display of your call number on another party's display.

Enter 0 or 1 to deactivate or activate the display of your own call number:

- "0" the display of your own call number is suppressed to other call participants
- "1" the display of your own call number is permitted to other call participants

In the as-supplied condition, the display of your own call number is activated.

	Handset is on-hook.
  	Start the programming procedure.
 or 	Press key 0 or 1.
	Save the setting.








Enabling/disabling call waiting

You can set whether or not incoming calls are to be signalled during a call. You must apply to your local network operator for this feature. Inquire about the respective charges.

Enter 0 or 1 to disable or enable call waiting:

- "0" Call waiting is disabled
- "1" Call waiting is enabled

In the as-supplied condition, call waiting is enabled.









	Handset is on-hook.
  	Start the programming procedure.
 or 	Press key 0 or 1.
	Save the setting.

Programming the telephone settings

Clearing memory

You can clear any of the following memories via input of certain codes:

- " 0" clear the destination dialling memory
- " 1" clear the speed dialling memory
- " 2" clear the call list memory
- " 3" clear the number redial memory

-  Handset is on-hook.
-    Start the programming procedure.
-  Enter the password if necessary.
-  ...  Press one of the keys 0 ... 3.
-  Exit the programming procedure. The selected memory is cleared.










Checking the settings (status)

You can check the settings of your Profiset 30isdn. The display shows the two-digit code (→ page 27: "Programming the telephone settings", "Programming keys on the telephone") which you start each programming procedure with and the currently set value. If the setting allows more than one value (e.g. MSN 1, 2 and 3, destination dialling keys 1 and 2, speed dialling keys 0-9 a.s.o.) each memory and the relevant setting are displayed.

You can scroll forward and backward using the keys  and .

The symbol " _ " on the display indicates values which are not yet set (e.g. not assigned MSN, destination dialling or speed dialling keys)

You can view the current settings of the lock by entering the code " 30". The values displayed under the codes " 40" and " 41" could be necessary if you contact the hotline.

-  or  Handset is on-hook, or a call is in progress.
-    Start the programming procedure.
-  Enter the password if necessary.
-  /  Scroll through the settings via the +/- keys.
-  Exit the programming procedure.

Programming the telephone settings







Restoring the as-supplied condition

The Profiset 30isdn can be reset to the default settings.

To restore the as-supplied condition, it is absolutely necessary to enter the password, also if it is still programmed to 0000.

Enter 1 to restore the as-supplied condition (or 0 for no reset):

- "1" Restore the as-supplied condition.
- "0" Do not restore the as-supplied condition.






-  Handset is on-hook.
-   Start the programming procedure.
-  Enter the password.
-  Press key 0 or 1.
-  Exit the programming procedure.



Note:
If you restore the as-supplied condition, all programmed numbers and changed settings are cleared.

Displaying the software version

If you contact the Siemens Service (→ page 44) please tell them the number of your software version as thus makes the correction of defects a lot easier.

-  Handset is on-hook.
-  Enter the password if necessary.
-   Start the programming procedure.
- Software version is indicated on the display.
-  Display of software version is switched off.

Important information for installation and operation

Important information for installation and operation

Maintenance

To clean the telephone, use a damp or antistatic cloth. Never use any abrasive cleaning agents.




Do not use a dry cloth as the electronics may be damaged by static electricity!

Removing and inserting the labelling cards

The labelling cards are after the last page of these operating instructions. Please cut them out and insert them according to the illustration below. Insert the transparent foil cover on top of the labelling cards. You can use the labelling cards to note the names of users belonging to the stored numbers (→ page 25).

The illustration shows you how to insert and remove the labelling cards and transparent foil covers.

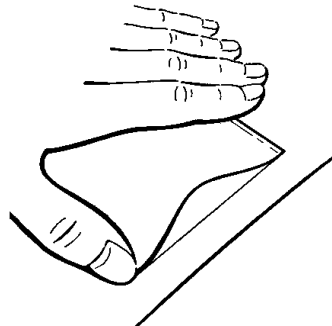

Important information for installation and operation

ISDN supplementary services

Your Profiset 30isdn supports a lot of ISDN services, e.g. toggle, park or conference.

The selection of services available depends on your network operator and the selected tariff group (basic or enhanced connection).

Contact your network operator for information on the services available.

Technical data

Power consumption:	Power supply by NTBA.
Permitted environmental conditions for operation:	+ 5 °C to + 40 °C 20 % to 85 % relative air humidity
Signalling method:	ISDN DSS1
Dimensions(L x W x H):	170 x 210 x 92 mm
Weight:	590 g
Length of connecting cord:	Telephone connecting cord approx. 3 m
Connecting plug:	Mini western RJ45

Default settings

The Profiset 30isdn is delivered by the manufacturer with the following settings:

- National variant: Germany (49)
- MSN: not set
- Call processing type: point-to-multipoint
- Trunk code: not set
- Memories (Destination dialling, speed dialling, number redial, call list, direct station selection number, call number for call forwarding): empty
- Call forwarding: OFF
- Connection code for park/resume: 00
- Call waiting: permitted
- Calling line identification presentation (CLIP): permitted
- Locking function: OFF
- Display of charge/call time of active call: ON
- Display of charge/call time of last call: ON
- Tariff unit factor: 0,00
- Summation meter: empty
- Password: 0000
- Ringer volume: 2
- Ringer melody: MSN1: 1; MSN2: 2; MSN3:3
- Handset volume: 3
- Restricted powering switch: in OFF position (not entitled for operation in restricted powering condition)

Important information for installation and operation

Overview: Signal tones

The switching signals (ringing tone, busy tone, dial tone) come directly from the network operator. Only the following signal tones are specific to this telephone.

Positive confirmation tone:

beeeeeeeep

0.6 s tone with 425 Hz.

Negative confirmation tone:

bep—bep—bep

0.1 s tone with 425 Hz and a pause of 0.1 s between each tone.

Callback tone:

1 s three melody tone and a pause of 2 s between each tone.

Call waiting tone:

beeeeeeeep ————— beeeeeeeep

1 s tone with 425 Hz and a pause of 4 s Pause between each tone.

Third party use/disposal

Your Profiset 30isdn telephone should only be passed onto third parties if the operating instructions are included.

When the telephone has reached the end of its service life, it should be disposed of in an environmentally friendly manner and in accordance with the relevant legislation.

Important information for installation and operation

Warranty

Siemens AG offers a six months warranty for this device from the date of purchase from the dealer. Always retain receipts as proof of date of purchase.

Over this warranty period, Siemens AG will rectify all material or manufacturing defects by repairing or exchanging the defective terminal. Siemens AG reserves the right to fulfil the warranty conditions by repairing or replacing the defective terminal.

The warranty does not cover damage caused by incorrect use, wear and tear or third party access. The warranty does not cover consumables or defects which only have a minor effect on the value or operability of the terminal.

The Siemens product purchased complies with the technical requirements for connecting to the German public telephone network.

For warranty claims, please contact Siemens Service directly.

Siemens Service

For defects in **Germany** call the nationwide service number : 0180 5 333 222

For defects in **Austria** call

- Siemens hotline 01/1707-5004 when connecting directly to the S₀ bus
- the respective installation company when connecting to a telephone system, e.g. Siemens PBX in Vienna, NO, Bgld.

Call number: 01/1705



Siemens Service should only be contacted if problems develop with the device.

Your specialist dealer will be happy to answer any questions concerning unit operation.

Contact your network operator for questions concerning telephone connection.

Important information for installation and operation

Procedure in the case of malfunctions

The cause of an operating error need not necessarily lie with the device. You may save time and money by rectifying simple faults yourself.

The following information should be of help.

Symptom	Cause	Action
No display.	No power supply.	Check that the telephone connecting cord has been inserted correctly in the device and the NTBA. Check the NTBA plug-in connection with the power network. Check the restricted powering switch, → page 4.
No dial tone.	No power supply. Handset cord not connected correctly.	Check the plug-in connections of the telephone connecting cord on the device, the ISDN socket, and the NTBA. Check the plug-in connections of the handset cord on the device and on the handset.
No ringing tone.	Loudspeaker volume off.	Set the loudspeaker volume, → page 29.
With PBX operation: No or incorrect connection after dialling from memory.	Trunk code not set.	Program the trunk code, → page 31.
The password entered is rejected.	Password entered incorrectly.	Try again. If you have forgotten your password, contact Siemens Service, → page 44.

ISDN glossary

ISDN glossary

The ISDN glossary should help you understand the many new terms and abbreviations relating to ISDN.

AOC-D	ISDN service. Abbreviation for A dvice o f C harge D uring Call and means that the charge of the call is displayed during the call.
AOC-E	ISDN service. Abbreviation for A dvice o f C harge at the E nd of Call and means that the charge of the call is displayed at the end of the call.
AOC-S	ISDN service. Abbreviation for A dvice o f C harge at the S tart of Call and means that the charge of the call is displayed at the start of the call.
B channel	The basic channel with a maximum transmission speed of 64 kBit/s.
Basic rate access	This is the ISDN basic rate access, It is the entry-level connection type in ISDN and offers two B channels with 64 kBit/s and a control channel with 16 kBit/s.
Call forwarding	Forward calls to another station.
Call waiting (CW)	ISDN service. If the line is busy, a connection request is signalled (acoustically or optically) by a call waiting signal.
CCBS	ISDN service. Abbreviation for C ompletion of C alls to B usy S ubscriber and means that a busy subscriber will be automatically called back as soon as he/she finishes his/her call.
CCITT	Abbreviation for C omité C onsultatif I nternational T élégraphique et T éléphonique which is an international consulting body for telegraphy. The CCITT has changed over to the ITU. It publishes recommendations which are frequently viewed as standard in the international telecommunications industry.
CFU	ISDN service. Abbreviation for C all F orwarding U nconditional and means that call forwarding is possible for all incoming calls.
CLIP	ISDN service. Abbreviation for C alling L ine I dentification P resentation and means that the calling party's number appears on the called party's display.
CLIR	ISDN service. Abbreviation for C alling L ine I dentification R estriction and means that the calling party's number is suppressed on the calling party's display.
COLR	ISDN service. Abbreviation for C onected L ine I dentification R estriction and means that the called party's number is suppressed on the calling party's display.
COLP	ISDN service. Abbreviation for C onected L ine I dentification P resentation and means that the called party's number appears on the calling party's display.
D-Kanal	Control channel, also known as the data channel, which is provided in the ISDN basic rate access with 16 kBit/s and in the primary rate access with 64 kBit/s. It is required in particular for connection setup and clear-down.

ISDN glossary

Dual tone multi-frequency (DTMF)	A signalling method whereby the information is transmitted to the switching centre in the form of tones with various frequencies.
Euro ISDN	Uniform European ISDN standard introduced at the end of 1993.
Hold	The " Call hold" feature. The non-communicating state of the user put on hold in the course of a consultation or toggle action.
Hunt group	A number of terminals can be accessed under one call number or are switched together to one connection. A number of basic rate accesses can also be switched together to one connection.
ISDN	Abbreviation for I ntegrated S ervices D igital N etwork. Service-integrating digital telecommunications network which integrates telecommunications services such as telephone, telefax,, data and image transmission in a network.
ISDN service	The ISDN network offers several additional services to make communication more convenient, e.g. call forwarding, three-party conference. These additional features are called ISDN services.
LTU	Abbreviation for " ISDN line trunk unit" .Connecting box for digital terminals on the S ₀ bus.
MSN	Abbreviation for M ultiple S ubscriber N umbers; a multiple subscriber number of the ISDN basic rate access in a multi-device connection.
Multi-device connection	A connection whereby a number of terminals can be operated simultaneously on an S ₀ bus in point to multipoint operation.
Multiple Subscriber Number (MSN)	Assigned by Deutsche Telekom for an ISDN basic rate access with multi-device connection. Multiple subscriber numbers are used for direct inward dialling to the terminal but, unlike the direct inward dialling number, are completely independent of each other.
NTBA	Abbreviation for N etwork T ermination for B asic A ccess. Network termination of an ISDN basic rate access which is installed by or can be obtained from Deutsche Telekom.
Park (TP)	ISDN service. Abbreviation for T erminal P ortability and means that a call can be parked in order to unplug the telephone from one socket and plug it into another socket of the same S ₀ bus.
Point-to-multipoint operation	Is an ISDN multi-device connection whereby a number of ISDN terminals can be operated on an S ₀ bus.
Point-to-point operation	An example of point to point operation is the primary rate access. In this case, only one terminal can be operated on the connection. For this reason, it is called a system connection. In most cases, the system connected is an ISDN PBX.
Primary rate access	ISDN connection equipped with 30 B channels each offering 64 kBit/s. Primary rate access (system connection) is only available in connection with a standard rate or premium rate access.
S₀ bus	A line used from the network termination in the multi-device connection. Up to 12 connecting boxes and up to 8 ISDN terminals can be connected to an S ₀ bus; of these, however, only 4 ISDN terminals can be connected simultaneously without separate power supply.

ISDN glossary

Service indicator	A feature of ISDN. The service indicator, which is sent with every ISDN connection, indicates the type of connection required. If the service indicator of the calling terminal does not correspond to that of the called terminal, the connection is not established.
Standard rate access	Service package for ISDN features.
System connection	A particular type of ISDN connection. In the Euro ISDN, either the basic rate access or the primary rate access can be used for a system connection. The system connection is a point-to-point connection.
Three-party conference (3PTY)	In a three-party conference, a user is simultaneously connected to two other parties, whereby all three parties can speak to each other.
Toggle	A special type of consultation whereby the two parties can be spoken to alternately without interrupting the telephone connection.
TSI	Abbreviation for "Terminal Selection Identifier". Used for the old German ISDN protocol 1TR6 (no longer widely used) to address a number to terminals connected to the same basic rate access. Nowadays, MSNs are used for this function.
Western plug	General term for connectors with 4 or 6 contacts with analog terminals and 8 contacts with ISDN terminals.

Quick reference guide

Quick reference guide

Number redial: → oder ... →

Programming the Destination dialling keys: → → → (call number) →

Dialling with the Destination dialling keys: → or →

Programming the Speed dialling keys: → → (digit key) → (call number) →

Dialling with the Speed dialling keys: → → (digit key)

Dialling from the call list: →

Call forwarding: →

Open listening: →

Mute: →

Parking a call: → → → →

Resume a parked call: → → → →

Locking the telephone: → (Password) or → or
(, 1" = total lock; , 2" = Partial lock; , 0" = deactivating the lock)

Consultation: → (call number) →

Toggling: → ...

Conference: (consultation call) →

- Handset is on-hook
- Call is in progress
- Lift the handset
- Replace the handset
- Press the related key
- Enter the necessary value via digit keys

Quick reference for available telephone settings

Quick reference for available telephone settings


Description	Procedure	Telephone settings	page
Call number for call forwarding uncondit.	⊙ 0 2	one call number	34
Call processing type	⊙ 0 6	main station (0) / point to point (1)	30
Call waiting	⊙ 0 7	disable (0) / enable (1)	38
Checking the settings (status)	⊙ 0 0		39
Clearing mememory	⊙ 2 5	destination dialling memory (0); speed dialling memory (1); incoming call memory (2); last number redial memory (3)	39
Clearing the summation meter	⊙ 1 8		37
Connection code for parking/ resuming a call	⊙ 0 5	none or max. two-digit connection code (1 ... 99)	34
Date/time	⊙ 1 3		34
Display of charge/call time of active call	⊙ 1 6	OFF (0) / ON (1)	35
Display of charge/call time of last outgoing call	⊙ 1 7	OFF (0) / ON (1)	36
Displaying of the summation meter for charges	⊙ 1 4		36
Displaying the software version	⊙ 2 7		40
Handset and loudspeaker volume	⊙ 2 3	four levels (1 ... 4)	30
Keypad signalling	⊙ * ⊙		20
MSN	⊙ 0 1	MSN 1; MSN 2; MSN 3	31
National variants	⊙ 1 9		32
Own call number	⊙ 0 3	OFF (0) / ON (1)	38
Password	⊙ 2 0	four-digit password (0000 ... 9999)	28
Programming the destination dialling keys	⊙ 1 0	2 call numbers	25
Programming the speed dialling keys	⊙ 1 1	10 speed dialling numbers	25
Programming direct station selection	⊙ 1 2	one direct station selection number	26
Restoring the as-supplied condition	⊙ 2 6		40
Ringer melody	⊙ 2 2	four melodies (adjustable for each MSN)	29
Ringer volume	⊙ 2 1	four levels (1 ... 4); OFF (0)	29
Signalling method to control the ISDN services	⊙ 0 8	CFU (1); AOC (2); CH (3); 3PTY (4)	33
Tariff unit factor	⊙ 1 5	0,00 ... 9,99	35
Trunk code	⊙ 2 4	max. two-digit trunk code (0 ... 99)	31


Index

A		H	
Accepting a call	12	Handset and loudspeaker volume	30
Accepting a callback	16	I	
Accepting call waiting	13	Initiating a callback	15
Approval and conformity	VI	ISDN glossary	46
C		K	
Call forwarding	12	Keypad signalling	20
Call list	14	L	
Deleting the call list	15	Labelling cards	41
Dialling a number from the call list	14	Location of the telephone	V
Retrieving entries from the call list	14	Locking your telephone	19
Storing a number from the call list	14	Partial lock	19
Call number for call forwarding unconditional	34	Total lock	19
Call processing type	30	M	
Main station	30	Main station	30
Point to Point	30	Maintenance	41
Call waiting	13	Multiple Subscriber Numbers (MSN)	31
Callback	15	N	
Calling a second party (consultation)	22	National variants	32
Calling users	9	Number redial (automatic dialling)	10
Checking the settings (status)	39	O	
Clearing a callback	16	On-hook dialling	9
Clearing memory	39	Open listening	17
Clearing the summation meter	37	P	
Connect the telephone	3	Parking a call	18
Consultation	22	Password	28
Contents of the package	2	Point to point	30
D		Procedure in the case of malfunctions	45
Date	34	Program the Multiple Subscriber Numbers	4
Deactivating the call signal	13	Program the trunk code	5
Dialling call numbers using		Programming direct station selection	26
Destination dialling key	10	Programming the destination dialling keys	25
Dialling call numbers using		Programming the speed dialling key	25
the Speed dialling keys	11	Programming the telephone settings	28
Dimensions	42	Putting into operation	1
Disconnecting	16	Q	
Display	7	Quick reference guide	49
Display of charge/call time	35	R	
of the active call	35	Rejecting a call	12
of the last outgoing call	36	Rejecting call waiting	13
Display of your own call number	38	Restoring the as-supplied condition	40
Displaying the software version	40	Restricted powering conditions	4
Disposal	43	Restricted powering switch	4
Do not disturb	13	Resuming a suspended call	18
DTMF signalling	20	Ringer melody	29
E		Ringer volume	29
Enabling/disabling call waiting	38		
Ending a call	16		
Ending a conference	24		
Ending a consultation	22		
Exiting from a conference	24		

Index

S	
Safety	V
Setting the national variants	5
Siemens Service	44
Signal tones	43
Negative confirmation tone	43
Positive confirmation tone	43
Signalling method to control the ISDN services	33
Summation meter for charges	37
Switching to mute	17
T	
Tariff unit factor	35
Technical data	42
Telephone connecting cord	3
Third party use	43
Three-party conference	23
Time	34
Toggling	22
Trunk code for operation at a PBX	31
W	
Warranty	44
Weight	42

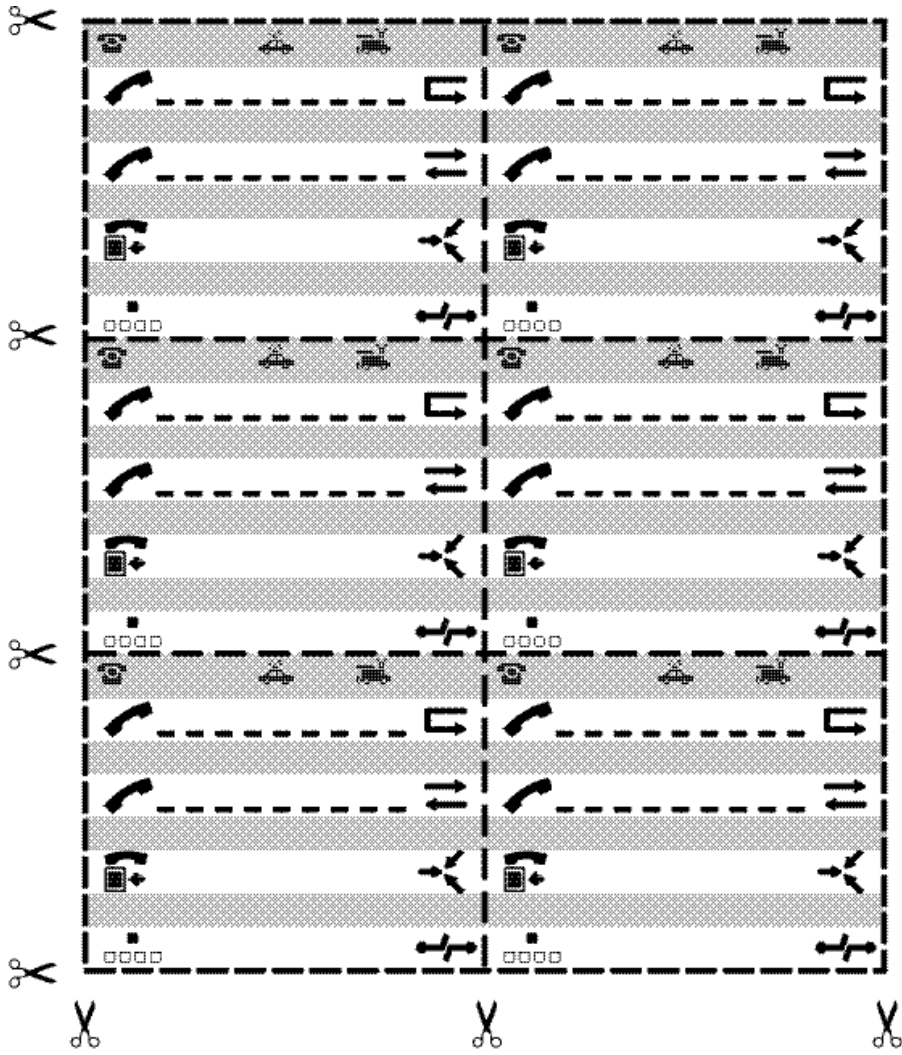

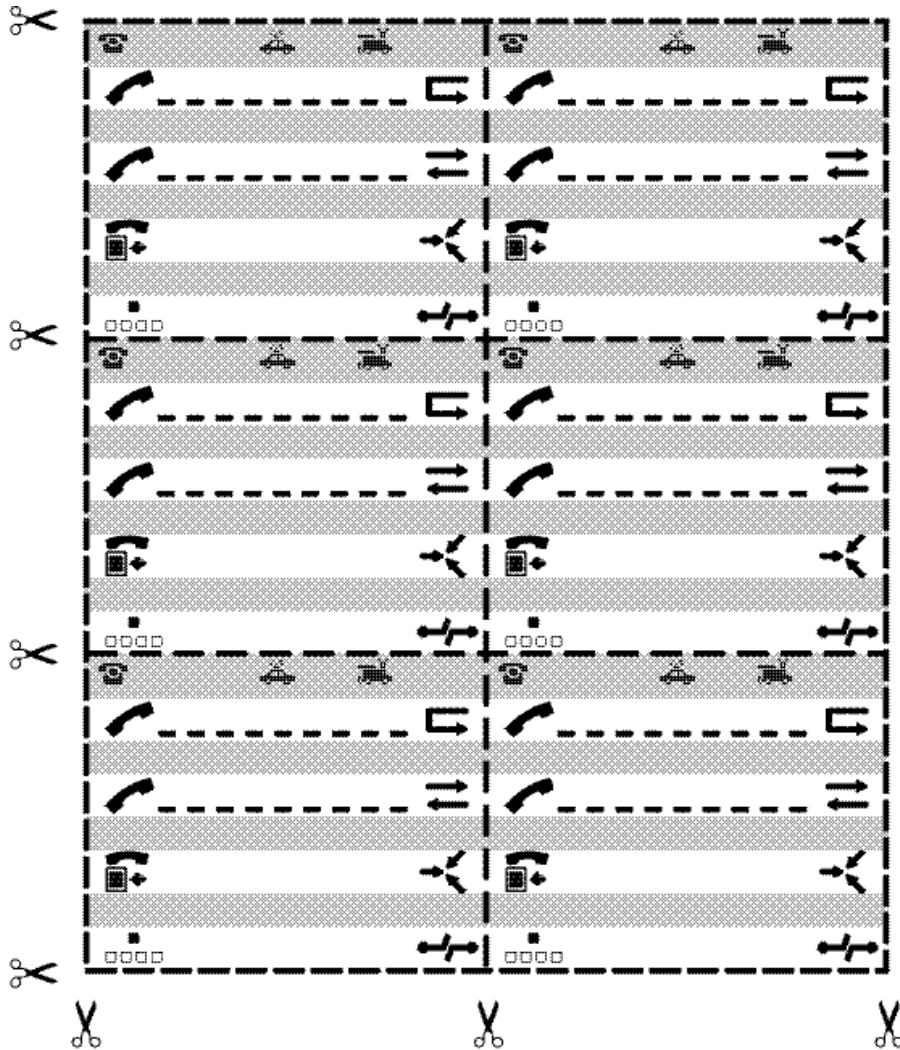

This device complies with the requirements of the EU guidelines:



89/336/EEC "Electromagnetic Compatibility"
73/23/EEC "Electric Operating Resources for Use within
Specific Voltage Parameters"
and thus bears the CE mark.

Issued by
Information and Communication Products
Hofmannstrasse 51
D 81359 München

© Siemens AG 1998. All rights reserved.
Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
<http://www.siemens.de>

Ref.-No.: A30853-X300-B107-1-7619
Printed in Germany
(12/98)